

roadscout® RST1

Installation guide for Authorised Installers
installing the RoadScout RST Telematics
OBD Device.



INSTALLATION
Guide


gps
innovations™
safety through innovation

 **1300 438 477**

www.gpsi.com.au

Getting Started

Before you begin the installation make sure you have all the following components to complete the install.

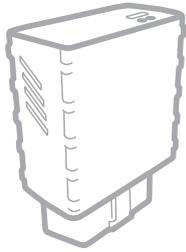


RoadScout
Device




NOTICE Sticker
for the windscreen

Optional - Preferred for Authorised Installers


Only required if mounting the device behind the dash or kick panel.

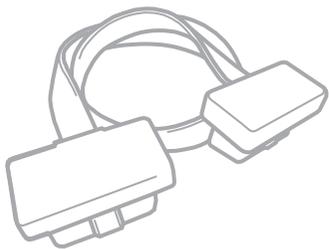

OBD Extension
Cable

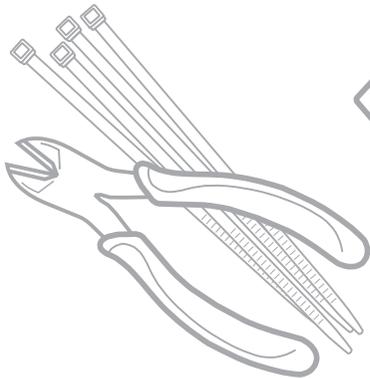

Cable Ties &
Side Cutters

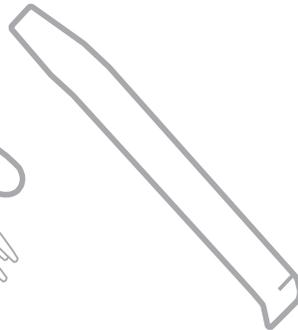


Plastic Dash
Removal Tool

1 Locate the OBD-II port

The OBD-II port is usually located under the dashboard, beneath the steering wheel column (1- 3 in the diagram below).

Note: If not located beneath the steering column, look for the port in the areas indicated by numbers 4-6.

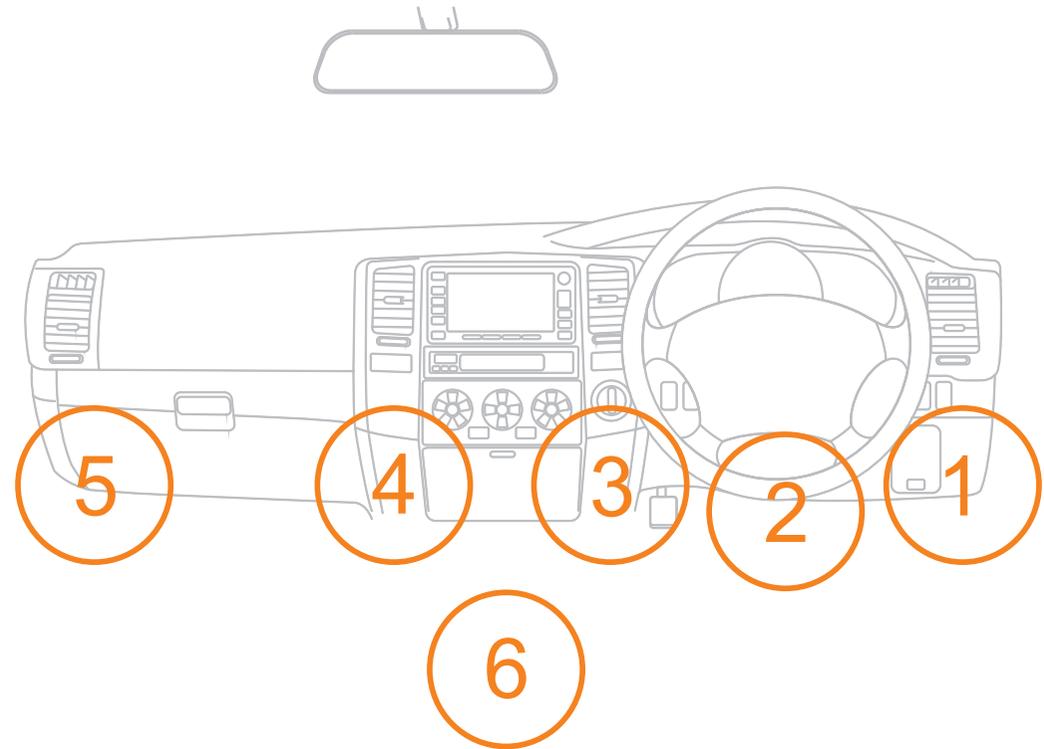

The OBD-II port is a 16 pin plug which is common in most late model vehicles and light trucks from 2006 onwards.


2a Install directly into OBD

Choose a location where the vehicle is outdoors and NOT underground. eg. carpark or garage. In a single motion, push the RoadScout device firmly all the way into the OBD port.



IMPORTANT SAFETY NOTE

Ensure the device does not protrude out or interfere with the driver entering or existing the vehicle.

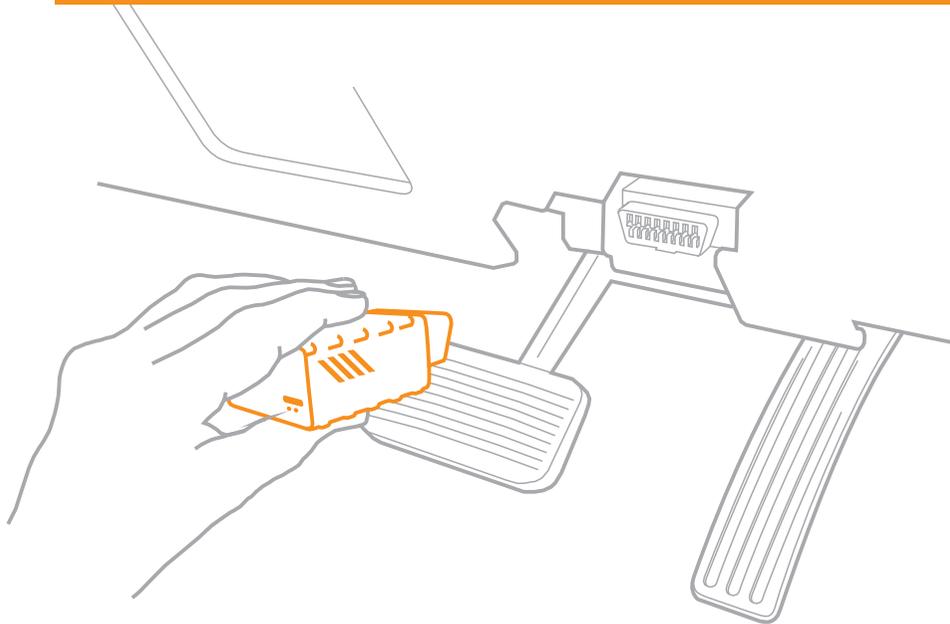


- GPS LED SOLID - No GPS
- GPS LED FLASHING - GPS FIX

2b Installing device in the kick panel or high under the dash (Authorised Installers Preferred)

Choose a location where the vehicle is outdoors and not underground like a carpark or garage. Remove the cover of the kick panel or side of the dashboard on the driver side.

- Plug the optional OBD extension cable in the RoadScout device.
- Find a **flat rigid surface or frame** usually the inside of the chassis wall, or up high under the dash with the label facing up and mount the RoadScout securely using cable ties.
- **IMPORTANT ensure you mount the device with the label facing up to the sky or inside of the cabin. Making sure no metal is covering the label on the device.**
- Plug the OBD extension cable into the OBD port.
- Reinstall the kick panel cover.

OR

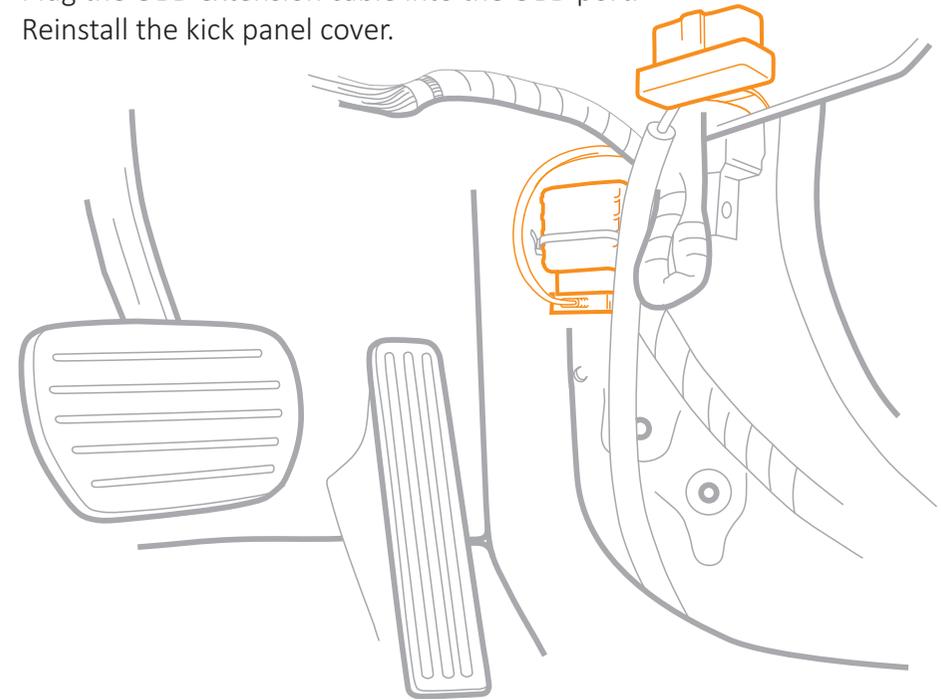


IMPORTANT SAFETY NOTE

Ensure the excess cabling is rolled up and cable tied ensuring the cable can't drop down at the drivers feet.


3 Start the vehicle

Once the vehicle is running call GPSi Support Team on **1300 438 477** to confirm the device is communicating and operating as expected.

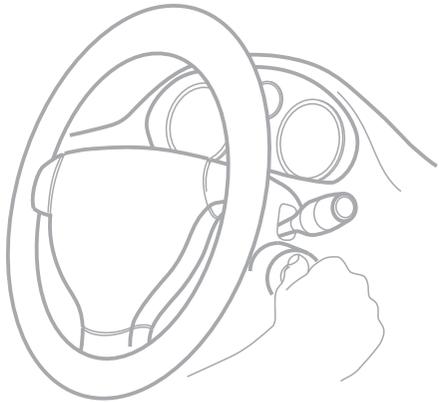

4 Apply the GPS Notice Sticker

It is law that any vehicle being monitored must have a notice that is clearly in view of the driver that indicates that the vehicle has a telematics device installed. Place the sticker high on the inside corner of the windscreen.

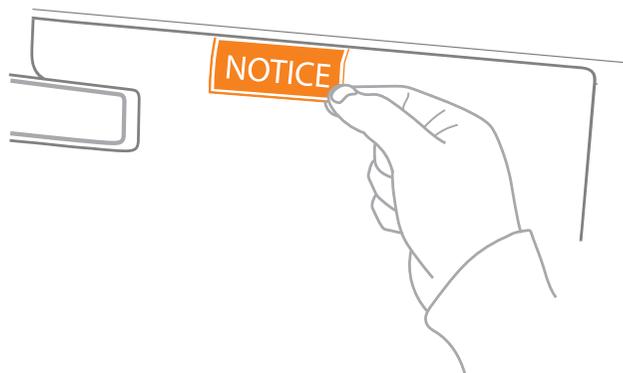

5 Complete the Online Installer Form

You would've received the link to the Online Installer Form when the installation was booked. Follow that link to complete the installation process. Remember to take photos of the RoadScout device and OBD connection for the photos to be uploaded.



**Congratulations you have
successfully completed your install**

Need Help?

If you have any issues or questions please contact our Help Desk.

1300 438 477

**gps
innovations™**

William Jolly Place
Ground Floor, 309 North Quay
Brisbane CBD QLD 4000

www.gpsi.com.au